

Safence





Product Manual



Release 07/22 Safence is licensed to Ingal Civil Products by Blue Systems Inc. of Sweden

www.ingalcivil.co.nz





1.0 Introduction

The superior design and clean lines of Safence Wire Rope Safety Barrier (WRSB) has seen it become the road safety industry's preferred wire rope barrier. Safence has gained popularity as a median barrier for the prevention of crossmedian accidents. Cross-median accidents are typically violent collisions with a high probability of multiple serious injuries and death. Thus, the design trend is towards providing positive vehicle containment in wider median applications for which barriers have not historically been warranted.

The straight alignment of the ropes allows for easy installation and tensioning. Post footings are typically concrete with a sleeve to form a recess. Once the anchors and footings are poured, the ropes are cut to length, stainless steel end fittings are machine swaged and the ropes are tensioned.

The Safence system has configurations that are compliant with NCHRP-350 Test Level 3 and TL4. With the transition to MASH compliant highway safety products across most New Zealand jurisdictions, please check with your local road authority for it's current status. In jurisdictions where Safence has moved to Legacy status, it has been replaced with MashFlex, our MASH compliant WRSB system. An upgrade kit is available for existing runs of Safence to bring them up to a MASH compliant level, refer drawing WR-STD-89.

2.0 Configurations

2.1 Safence TL4

Safence TL4 is available as a 3-rope or 4-rope barrier and has been assessed in accordance with NCHRP Report 350 Test Level 4 (TL4). The TL4 heavy vehicle impacts are performed with a 2,000kg pick-up truck travelling at 100km/h and 25° and an 8,000kg rigid truck travelling at 80km/h and 15°.

The TL4 conguration requires the addition of a post stiener plate and top rope hook. All other components are identical to the TL3 conguration. The 3 rope conguration is achieved by removing the 2nd from bottom cable.

2.2 Safence upgrade to MashFlex

As the Safence and MashFlex use the same concrete post footing and anchor blocks, many existing runs of TL3 or TL4 Safence can be upgraded with a simple upgrade kit, while reusing the existing cables, post footings and anchor blocks. The kit consists of a sleeve packer and stiffening insert, making the old post footing compliant. The standard MashFlex post and post-cap can then be installed into the old foundation.

3.0 Specification

Material:

Steel Wire Rope: Mass – 1.21kg/m

Ultimate Tensile Strength - 165.5kN

Sigma Posts: Material to AS/NZS 1594
Anchor Bracket: Material to AS/NZS 1594
Swage Fittings: Stainless Steel, Grade 304
Plastic Parts: UV Stabilised Polypropylene

Finish:

Steel Wire Rope: Galvanised coating

Sigma Posts: Galvanised to AS/NZS 4680 Anchor Bracket: Galvanised to AS/NZS 4680

Dimensions:

Steel Wire Rope: Right Hand Lay, Ø19mm, 3 strands,

7 wires each $(1 \times 3.15 \text{mm} + 6 \times 3.0 \text{mm})$

Sigma Posts: 1230mm long

Cable Heights:

Top: 720mm
2nd from Top: 640mm
2nd from Bottom: 560mm
8ottom: 480mm







4.0 Technical Data

4.1 Safence Performance

Wire rope safety barriers are classified as flexible barriers and consideration must be given to the expected movement of the barrier when impacted.

The design of a WRSB should include an assessment of the mass of the impacting vehicle, its speed and angle of impact. Whilst rigorous crash testing is undertaken to evaluate the performance of roadside barriers, the deflection results obtained during testing should not be considered an exact distance, but rather as a single point within the range of deflections that can be expected.

4.2 Working Width

The working width is the maximum width that is required to prevent an impacting vehicle from colliding with an object behind a road safety barrier system. This includes the dynamic deflection and the extra width due to the roll of an impacting vehicle. The roll of a vehicle is an important consideration in shielding a fixed object hazard such as a utility pole or bridge support.

4.3 Dynamic Deflection

The dynamic deflection is defined as the largest transverse deflection of a road safety barrier system recorded during an actual crash or during a full-scale impact test.

If the available space between the hazard and the barrier is not adequate, then the barrier can be stiffened in advance of, and alongside the hazard by reducing the post spacing. Other factors that can have an influence on the deflection of the barrier include tension in the wire rope cables, horizontal curvature and installation length.

Safence crash test deflection results are listed on the Ingal drawings.

4.4 Footing Selection

Safence posts are supported by concrete footings containing a plastic sleeve. The footing provides lateral support to the post during impact ensuring the post yields by bending near ground level. The size of post footings is dependant upon the surrounding soil type and distance to the embankment rounding point.

Table 1 provides guidelines for the construction of post footings for varying site conditions.

Table 1: Post Footing Selection Guide							
Centre of Post Footing to Rounding Point	Standard Soil Weak Soil						
	Dia	Depth	Dia	Depth			
Less than 0.5m	300	600	300	750			
Greater than 0.5m	300	600	300	600			

The minimum concrete compressive strength at 28 days is 25Mpa.

If using the Driven Sleeve footing option, please refer drawing WR-STD-86 and your local Road Controlling Authority acceptance conditions prior to design or installation.

In the event that the soil type cannot be verified, then a post pull-over test can be conducted to validate the structural capacity of the footing.

A pull-over test is conducted by applying a load to the top of the post whilst positioned in the proposed footing design. The footing is required to remain stable until the post yields. Once the post yields, the footing has been subjected to its maximum potential load.

4.5 Minimum Length

The recommended minimum length-of need for a Safence installation is 40m.

4.6 Maximum Length

The recommended maximum run length of a Safence installation is 1200m.

4.7 Point-of-Need

Safence is designed to contain and redirect errant vehicles away from road side hazards. The location along the barrier system that redirection occurs is known as the point-of-need.

The point-of need for both the Safence TL3 and TL4 configurations is 12.6m from the anchor point when using the TL3 End Terminal.

5.0 End Terminals

End terminals are used to anchor the system and provide a soft gating impact to prevent vehicles from launching or snagging upon impact with Safence.

5.1 TL3 Terminal

The TL3 Terminal has been crash tested to meet the requirements of NCHRP Report 350 TL3. It can be used on all new installations or retrofitted to existing Safence installations.

The TL3 Terminal gradually tapers the cables from full height to an anchor bracket located at ground level.

The TL3 Terminal has demonstrated an ability to provide a soft, gating impact without releasing the cables from the anchor point. This non-release feature allows the system to remain anchored following design impacts.

This important feature contrasts terminals that are designed to release the cables for end-on impacts. Once these terminals release the cables their ability to provide continued containment and redirection for errant vehicles is compromised.

5.2 Standard Terminal

The Standard Terminal is designed to provide the necessary tensile support to redirect errant vehicles that impact the wire rope barrier within the length-of-need section.

5.3 TL3 Terminal - Workzone Applications

If used in a temporary workzone, the hazard free area is to be 30m from anchor point, with a width of 6m running parallel with the system.







6.0 Installation

The following written instructions should be read in conjunction with Ingal Civil Products' drawings.

A Safe Work Method Statement is available upon request to assist in the safe assembly of Safence.

Tooling and equipment is provided by Ingal for the installation of Safence. This equipment is known as the Safence Tension Unit and Safence Swaging Unit. Please contact your nearest Ingal representative for the safe operating instructions for this equipment.

6.1 Site Preparation

The approach terrain to the barrier should be level, otherwise a maximum grading of 1V:10H is permitted. Steeper slopes may result in the vehicle impacting the barrier at other than the design height.

6.2 Horizontal and Vertical Alignment Criteria

The length and/or horizontal curvature of an installation of wire rope barrier may increase the dynamic deflection of the barrier. In addition, horizontal curves may place more lateral load on the post foundations. To calculate the effect of a curve on the deflection, multiply the deflections as detailed on the system arrangement drawings by the curve correction factor in Table 2, the length column is the total length of the run. These correction factors only apply to convex curves.

The minimum allowable sag vertical curve for wire rope barriers is \geq 30m. (K = length of VC in metres divided by the change in grade expressed as a percentage). There is no K value limit for crest curves.

Table 2: Length and Curve Correction Factors

Length (m)	Convex Curve Radius (m)								
	150-299	300-449	450-749	750+					
0-100	1.4	1.3	1.1	1.0					
101-200	1.6	1.4	1.2	1.1					
201-300	1.6	1.5	1.3	1.1					
301-500	1.7	1.5	1.3	1.2					
501-1000	1.8	1.6	1.4	1.2					





6.3 End Anchor Site Preparation

The site should be inspected for the presence of underground utilities prior to any excavation. The site should be prepared free of obstructing vegetation and other hazards that may interfere with the installation or operational performance of the system. Some sites may require minor grading if installed beyond the edge of the pavement shoulder.

Vehicles impacting the end of the terminals will normally continue behind and beyond the barrier and may encounter non-traversable terrain or other roadside hazards. It is recommended that the guidelines as stated in AS/NZS 3845 for the installation of gating safety barrier end terminals be observed.

AS/NZS3845 requires that a Hazard Free Zone'immediately behind the terminal... should be reasonably traversable and free from fixed object hazards. If a clear runout is not possible, this area should be similar in character to adjacent unshielded roadside areas.'

6.4 Construction of Anchor Blocks

Safence is available with a variety of anchor block designs. These include;

- 1. Default block Type 3 WR-STD-64
- 2. Poor soil conditions Type 1 WR-STD-62
- 3. Spacial limitations Pier WR-STD-82

The selection of a suitable design will depend upon soil type, refer anchor drawings for minimum conditions.

Typically, the alignment of the anchor block will follow the same alignment as the length of need section. If site conditions require the anchor block to be offset to the length of need section, a 200m radius can be introduced upstream from the end anchor until the desired offset angle is achieved. The fence can then be tapered at a constant rate to achieve the required offset distance.

The construction sequence is as follows;

- 1. Excavate the anchor hole in accordance with Ingal drawings.
- 2. If installing the rectangular anchor block, clip out several grids of the reomesh square to fit over the anchor bracket as shown in Ingal drawing WR-STD-62.



- 3. Attach 3 off M20 x 550mm hook bolts to the base of the anchor bracket using 2 off M20 nuts per hook bolt. One M20 nut is used either side of the anchor bracket to secure each hook bolt.
- 4. Using formwork, suspend the anchor bracket and reomesh, ensuring the anchor bracket levelling plate is at the same longitudinal grade as the roadway. The position of the anchor bracket is to be in accordance with Ingal drawings.



- 5. To prevent flotation or dislodgement during the concrete pour, drive a shortened star picket into the base or side of the excavation and use tie wire to secure the bracket.
- 6. Pour concrete into the excavation and vibrate. Ensure that the anchor bracket has remained secure.
- 7. Trowel the surface of the anchor block and shape to provide fall way from the anchor bracket.



6.5 Construction of Concrete Post Footings

- 1. Establish post spacing in accordance with expected dynamic deflections and excavate postholes to the dimensions in accordance with Table 1. Note that the height of the footing must be within 20mm of the design reference height.
- 2. Pour concrete into each hole.
- 3. Insert the post footing reinforcement ring to a depth providing 50mm of cover.







- 4. Insert the Safence post into the plastic HDPE sleeve.
- 5. Push the Safence post and the plastic HDPE sleeve into the wet concrete so that the top of the plastic sleeve is at ground level. The posts are orientated so that the smooth face is towards the traffic face.
- 6. Trowel the surface of the post footings and shape to provide fall away from the post sleeve.



6.6 Driven Sleeve Post Footings

The Driven Sleeve Footings are driven directly into the ground and should be vertical. The sleeve installation process shall not cause damage to the sleeve, such that it reduces the design life, or introduces sharp edges. Refer drawing WR-STD-86.

Ensure the area has been inspected for underground hazards and services prior to installation.

Sleeves should be driven to a depth appropriate for the finished cable heights, as per drawing WRSTD-60.

6.7 Post Assembly Sequence

- 1. It is recommended that concrete used for the construction of anchor blocks and post footings be cured for a period of 7 days prior to tensioning.
- 2. Slide the ground covers over each Safence post.
- 3. Starting at the leading or high end of the fence, connect the bottom wire rope to the anchor using a temporary anchor connection and run out the wire

through the post slots to the far anchor and cut the rope to length. When a reel is depleted, attach the end to the next reel by tying the cables together and continue to run out the cable.

- 4. Insert the plastic spreaders into the post slots.
- 5. Repeat these procedures with subsequent wire ropes. Ensure the stainless frame is inserted between the top two ropes.
- 6. When all the ropes have been installed, fit the plastic caps to the posts.



5.8 Assembly Sequence – Safence TL4

The installation of Safence TL4 requires the addition of a rope hook be attached through the pre-punched holes in the top of the posts. Refer drawing WR-STD-60.

- 1. Prior to running out the wire, a reinforcement plate is required in each full height post. If installing a post without the pre-welded plate, a plate is dropped into the post and will come to rest within the post sleeve at the ground level.
- 2. If installing the TL4 system, ensure the post has the pre-welded stiffening plate (Figure 9). If not, please contact your local Ingal Civil representative.

Note. Ensure steel rope spreaders are used in the first full height post of the Safence TL3 Terminal. Refer post (k) on drawing WR-STD-050.









6.8 Installation of Tension Bays

Tension bays are located at 300m centres and not more than 150m from either anchor point. For fences less than 600m;


 Swage the stainless steel end fittings onto all the cables and attach to the anchor bracket. The procedure for swaging is contained in the Safence Swaging Unit Safe Operating Procedure Manual The bottom rope is located nearest to the approaching traffic face. Each end fitting is secured at the anchor with one washer and two nuts.

Note: An inspection hole is drilled into each stainless steel end fitting to ensure the wire rope cables are properly inserted into the end fittings before swaging.





2. Pull the slack out of the wire ropes toward the other anchor. This can be achieved by hand or by using a sling equipped with a lever claw clamp.

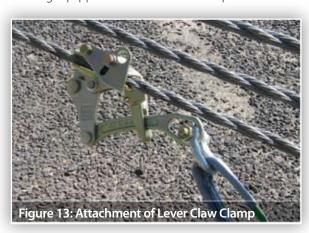

- 3. At locations where the wire rope reels have been temporarily joined, swage the end fittings onto the cables and install a tension fitting. End fittings should be positioned so that the end of the fitting is a minimum distance of 50mm from the post.
- 4. After the slack has been removed from the fence, machine swage the end fittings and attach to the trailing or low-end anchor.
- 5. Identify the tension bay location(s).
- 6. Mark and cut out an 800mm section from each cable. It may be necessary to attach temporary clamps one post back from the tension bay location prior to cutting in order to prevent the cables from retracting. End fittings should be positioned so that the end of the fitting is a minimum distance of 50mm from the post.







- 7. Swage the end fittings to each cable and attach the tension fittings. The procedure for swaging is contained in the Safence Swaging Unit Safe Operating Procedure Manual.
- 8. Attach the tensioning rig to the bottom cable and tension from the bottom up. The procedure for Tensioning is contained in the Safence Tension Unit Safe Operating Procedure Manual. Each rope is tensioned in accordance with Table 4.

For fences greater than 600m

- 1. Machine swage the cables at the leading or high-end anchor and attach to the anchor bracket.
- 2. Pull the slack out of the wire ropes towards the 1st tension bay location. This can be achieved by hand or by using a sling equipped with a lever claw clamp.
- 3. At the 1st tension bay location clamp the wire rope cable to a post. Repeat process for each cable, clamping each cable to a different post.
- 4. Cut the cables on the un-tensioned side of clamps and machine swage fittings. Assemble the tension fittings.
- 5. Relocate to the 2nd tension bay and repeat the above process. Continue until all the tension bays are completed.

- 6. Once the slack has been removed from the fence, swage the end fittings and attach to the trailing or low-end anchor.
- 7. Once the cables are attached at the anchor bracket, relocate to the centre tension bay.
- 8. Attach the tensioning rig and tension in accordance with Table 4 from the bottom up.
- 9. Relocate from the centre bay outwards repeating the tension process.
- 10. Once complete, relocate to the centre bay and repeat tensioning in this bay only.

Note: Upon completion, the tension bays shall not be more than 90% (40mm gap) of their full extent so as to allow for further adjustment.

Table 3: Construction Tolerances					
Description	Recommended Tolerance				
Rope Height	± 20mm				
Post Spacing	± 30mm				
Post Footing Dimensions	- 10mm				
Anchor Block Dimensions	- 20mm				

Table 4: Tension Unit Pressure Requirements						
Ambient Temperature °C	TL3 System (Bar)	TL4 System (Bar)				
- 10	(26kN) 278	(38kN) 410				
5	(24kN) 263	(36kN) 386				
0	(23kN) 247	(34kN) 363				
5	(21kN) 231	(32kN) 340				
10	(20kN) 215	(29kN) 316				
15	(18kN) 200	(27kN) 293				
20	(17kN) 184	(25kN) 270				
25	(16kN) 168	(23kN) 247				
30	(14kN) 152	(21kN) 224				
35	(13kN) 137	(19kN) 201				
40	(11kN) 121	(17kN) 177				

6.9 Clean-up and Waste Materials

Recycle, reuse or dispose of all surplus material, rubbish and other debris in accordance with the requirements of the local state based environmental protection specification.







7.0 Safence Maintenance

Safence is a low maintenance roadside safety barrier. Except for repairs due to impacts, there is virtually no maintenance required for the system. It is recommended that regular drive-by inspections be performed to ensure the following;

- 1. Post caps have not dislodged. Delineation stickers are attached to the post caps and a loss of numerous caps could result in poor delineation.
- 2. Debris has not accumulated around the system. A clear zone, free of hazards should exist immediately behind the fence to accommodate for the expected dynamic deflection.
- 3. Ropes have not dislodged from the posts as a result of minor impacts.

7.1 Cable Tension

Safence is supplied with pre-stretched wire rope. The prestretching process removes the constructional stretch in the wires as they 'bed-down'. Wire rope is essentially an elastic member and will not require retensioning after most impacts. For fences subjected to regular vehicle impacts or large seasonal temperature variations, it may be necessary to evaluate the rope tension annually. This can be undertaken using the Safence Tension Unit.

7.2 Bush Fire Damage 1

The performance of galvanized coatings when subjected to bushfire depends on a number of factors, such as flame duration, intensity and the characteristics of the galvanized coating and the technology with which it is applied.

Typical bushfire conditions may expose steel structures to air temperature of 800°C for periods of up to 120 seconds, however zinc coatings are generally reflective and will not absorb heat at the same rate as an uncoated steel surface. Depending on the section thickness of the steel, the actual steel surface temperatures may not exceed 350°C.

Typically, the bushfire flame duration and intensity are not high enough to compromise the structural strength of the steel. The hot dip galvanized coating will thus remain largely unaffected through a bushfire event. If the bushfire causes damage to the galvanized surface, then the item(s) shall be replaced.

7.3 Damage Assessment

In the event of a vehicle impact, damage to the barrier is to be assessed in accordance with Table 5. In the event that the ropes are to be cut, they are NOT to be cut under tension.

A Safe Work Method Statement is available upon request to assist in the safe repair of Safence.

¹ Information based upon testing conducted on behalf of Blue Scope Steel by the CSIRO Manufacturing and Infrastructure Technology Bushfire CRC in 2005.

Table 5:	Damage <i>F</i>	Assessment
----------	-----------------	------------

Type of Defect	Description of the Defect	Action to be Taken
Galvanizing damage on Posts.	The sum total of the damaged or uncoated areas does not exceed 10cm ² (0.5% of the total surface area).	An organic zinc rich epoxy paint is to be applied to the repair areas in two coats.
	The sum total of the damaged or uncoated areas exceeds $10\mathrm{cm^2}$ (0.5% of the total surface area).	The post is to be replaced.
Galvanizing Damage on Wire Rope Cable	The wire rope is nicked or gouged to less than 10% depth. The wire rope is nicked or gouged greater than 10% depth.	An organic zinc rich epoxy paint is to applied to the repair areas in two coats.
		The wire rope section is to be replaced.
Mechanical Damage	Any rope length containing more than 1 broken wire.	The rope section is to be replaced.
on Wire Rope Cable (Refer drawing	Any rope where the diameter is reduced by more than 10% by abrasion.	The rope section is to be replaced
WR-STD-59 on page 15)	Any rope which has been crushed or flattened by more than 10% of its nominal diameter.	The rope section is to be replaced.
Mechanical damage on Posts.	The post is distorted.	The post is to be replaced.
Damaged End Fitting	There is damage to the thread of the fitting, however tension can be maintained in the wire rope system without relying on the fitting.	There is no requirement for immediate replacement. The location of the fitting should be noted and scheduled for replacement during routine maintenance.
	There is damage to the thread of the fitting and tension cannot be maintained in the wire rope system without relying on the fitting.	The fitting is to be replaced.
	The fitting is cracked.	The fitting is to be replaced.
	The body of the fitting is distorted.	The fitting is to be replaced.
Damaged Tension	The fitting is cracked.	The fitting is to be replaced.
Fitting	The body of the fitting is distorted.	The fitting is to be replaced.






Safence Tensioning Report And Checklist								
Customer:								
Project:								
Fence ID:								
Fence Length:								
Ambient Temperature:								
Tensioning Force:								
Checked By:								
Signed:								
Date								
End Anchors								
Type of Anchor Blocks used: Type 1 Type 3 Other								
Is the anchor block dimensions in accordance with Ingal drawings	Yes	No						
Has the anchor bracket been installed with the levelling plate at the same longitudinal grade as the roadway	Yes	No						
Has each end fitting been secured with one washer and two nuts	Yes	No						
Post Fittings								
Have the posts been installed at the correct spacing	Yes	No						
Have the posts been installed with the correct orientation towards approaching traffic	Yes	No						
Have ground covers been attached to the posts	Yes	No						
Have plastic spacers been inserted between each cable	Yes	No						
Has the stainless frame been inserted between the top and second from top cable	Yes	No						
Have post caps been attached to the posts	Yes	No						
Has delineation been attached to the post caps	Yes	No						
Post Fittings – TL4 System Only								
Have rope hooks been attached to each post along the length of need section	Yes	No						
Tension Bays								
Have tension bays been installed at not more than 150m from the end anchors	Yes	No						
Have tension Bays been installed at not more than 300m apart	Yes	No						












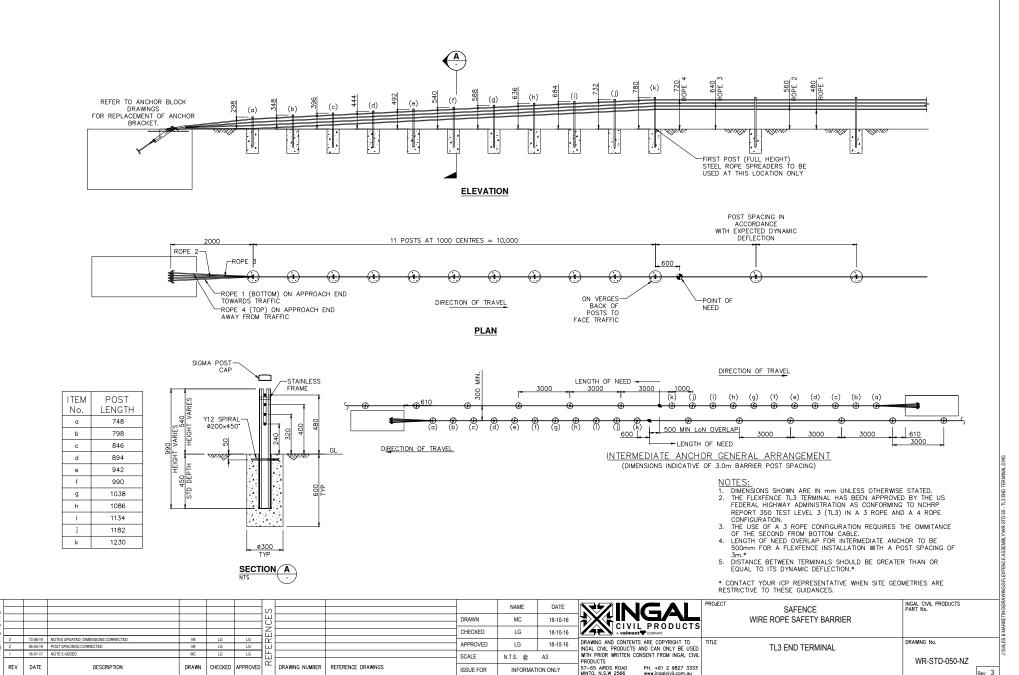

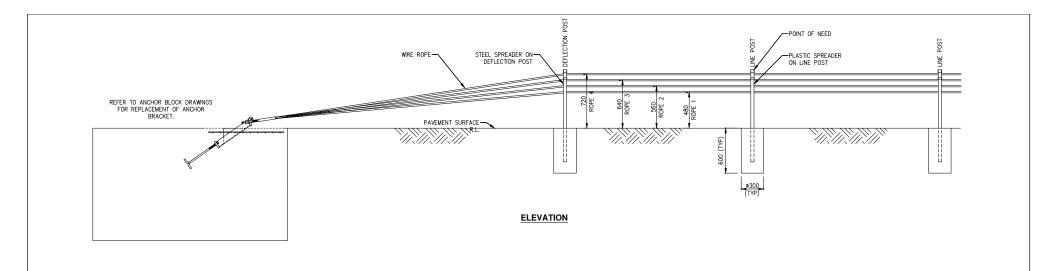

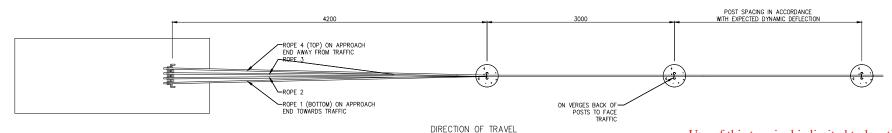

PLAN

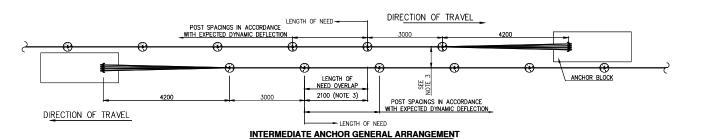

Use of this terminal is limited to locations where geometric constraints limit use of TL3 Terminal. Please contact your local ICP representative for further advice prior to design or installation. Approval may be required from road controlling authority.

- NOTES:


 1. DIMENSIONS SHOWN ARE IN mm UNLESS OTHERWISE STATED.

 2. LENGTH OF NEED OVERLAP FOR INTERMEDIATE ANCHOR TO BE 2100mm
 FOR A FLEXFENCE INSTALLATION WITH A POST SPACING OF 3m, CONTACT
 YOUR ICP REPRESENTATIVE FOR OVERLAP WHEN USING A DIFFERENT POST
 SPACING.
- SPACING.

 3. DISTANCE BETWEEN TERMINALS MUST BE GREATER THAN OR EQUAL TO ITS DYNAMIC DEFLECTION.

							S				NAME	DATE
S							빙			DRAWN	MC	18-10-16
l S S							2			CHECKED	LG	18-10-16
15	2	05-04-19	POST SPACINGS CORRECTED;	VB	LG	LG	냂			APPROVED	LG	18-10-16
2	1	16-01-17	NOTE 3 ADDED	MC	LG	LG	~			SCALE	N.T.S. @	A3
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	ISSUE FOR	INFORMATI	ION ONLY

NTE 10-16 10-16		INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD MINTO, N.S.W AUSTRALIA 2566 PH. +61 2 9827 3333 FAX-61 2 9827 3300 www.ingalcivil.com.gu	PROJECT SAFENCE WIRE ROPE SAFETY BARRIER	INGAL CIVIL PRODUCTS PART No.
10-16	DRAWING AND CONT	ENTS ARE COPYRIGHT TO CTS AND CAN ONLY BE USED	TITLE STANDARD END TERMINAL	DRAWING No.
		CONSENT FROM INGAL CIVIL	4-ROPE CONFIGURATION	WR-STD-055-NZ

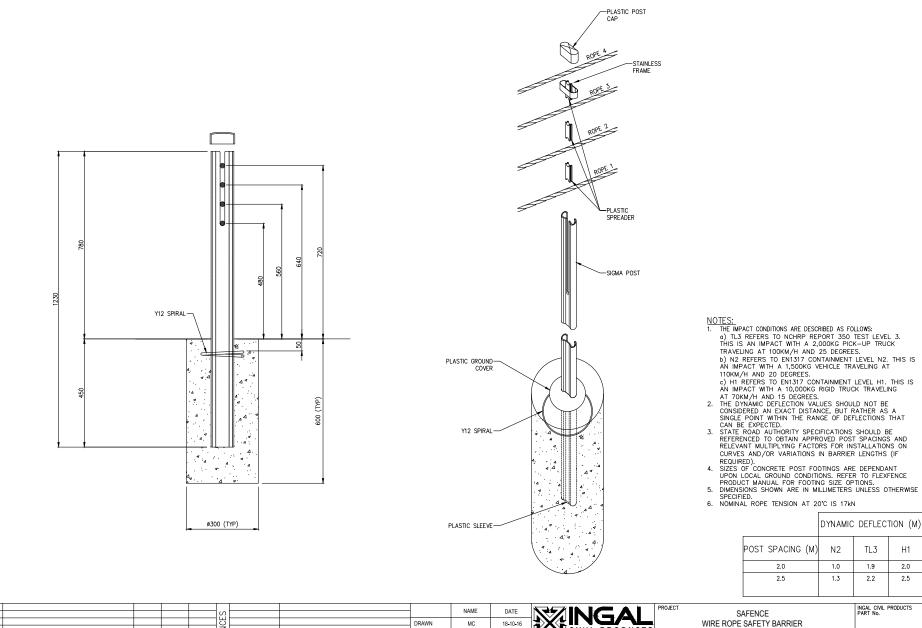

CHECKED

APPROVED

ISSUE FOR

SCALE

REV DATE DESCRIPTION

CHECKED APPROVED

DRAWING NUMBER

REFERENCE DRAWINGS

LG

LG

N.T.S. @ A3

INFORMATION ONLY

18-10-16

DRAWING AND CONTENTS ARE COPYRIGHT TO INGAL CIVIL PRODUCTS AND CAN ONLY BE USED

WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL

57-65 AIRDS ROAD MINTO, N.S.W 2566

PH. +61 2 9827 3333

H1


2.0


2.5


DRAWING No.

WR-STD-057-NZ

TL3 POST ARRANGEMENT

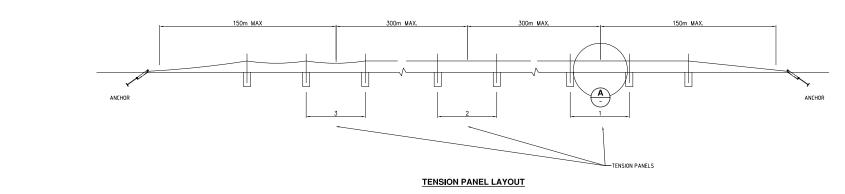






DETAIL A

DETAIL B

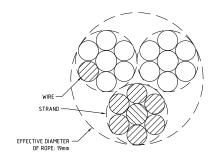

CROSS-SECTION OF ROPE
7 WIRES PER STRAND
3 STRANDS PER ROPE

NOTES:

1. ALL MEASUREMENTS ARE IN mm UNLESS STATED OTHERWISE.

_												
							S				NAME	DATE
S							힣			DRAWN	MC	18-10-16
VISIONS							E)			CHECKED	LG	18-10-16
Ĕ							ᇤ			APPROVED	LG	18-10-16
œ	1	22-09-2017	ROPE SECTION ADDED	MS	LG	LG	æ			SCALE	N.T.S. @	A3
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	ISSUE FOR	INFORMAT	ION ONLY


ATE	77 INICAL	
10-16	CIVIL PRODUCTS	
10-16	A valmont♥ COMPANY	
10-16	DRAWING AND CONTENTS ARE COPYRIGHT TO	

•	A valmont♥ COMPANY	
i	DRAWING AND CONTENTS ARE COPYRIGHT TO INGAL CIVIL PRODUCTS AND CAN ONLY BE USED	
	WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL PRODUCTS	
	57-65 AIRDS ROAD PH. +61 2 9827 3333 MINTO, N.S.W 2566 Pww.ingalcivil.com.au	

S	PROJECT SAFENCE WIRE ROPE SAFETY BARRIER	INGAL CIVIL PRODUCTS PART No.
D IL	TENSION PANEL ARRANGEMENT	DRAWING No.

WR-STD-059-NZ

WINGSIFLEXFENCE ASSEMBLYWR-S'

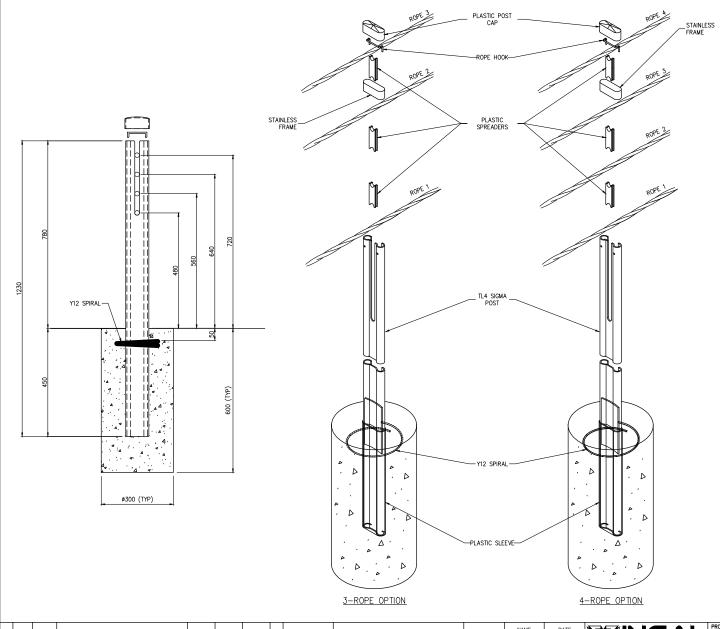

NOTES:

1. THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS;

a) TL3 REFERS TO NCHRP REPORT 350 TEST LEVEL 3. THIS IS AN IMPACT WITH A 2,000KG PICK-UP TRUCK TRAVELING AT 100KM/H AND 25 DEGREES.

b) TL4 REFERS TO NCHRP REPORT 350 TEST LEVEL 4. THIS IS AN IMPACT WITH AN 8,000KG RIGID TRUCK TRAVELING AT 80KM/H AND 15 DEGREES. FLEXFENCE TL4 HAS BEEN APPROVED BY THE US FEDERAL HIGHWAY ADMINISTRATION AS A 3 ROPE OR 4 ROPE BARRIFR.

2. THE DYNAMIC DEFLECTION VALUES SHOULD NOT BE CONSIDERED AN EXACT DISTANCE, BUT RATHER AS A SINGLE POINT WITHIN THE RANGE OF DEFLECTIONS THAT CAN BE EXPECTED.

3. STATE ROAD AUTHORITY SPECIFICATIONS
SHOULD BE REFERENCED TO OBTAIN APPROVED POST SPACINGS AND RELEVANT MULTIPLYING FACTORS FOR INSTALLATIONS ON CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF

REQUIRED).


4. SIZES OF CONCRETE POST FOOTINGS ARE DEPENDANT UPON LOCAL GROUND CONDITIONS. REFER TO FLEXENCE PRODUCT MANUAL FOR FOOTING SIZE OPTIONS.

5. DIMENSIONS SHOWN ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED

	DYNAMIC DEF	FLECTION (M)
POST SPACING (M)	TL3*	TL4*
2.0	1.3	1.1
2.5	1.4	1.2
3.0	1.6	1.3

* CABLE TENSION SET TO 25kN


						S			-	NAME	DATE	SZINICAI	PROJECT	SAFENCE	INGAL CIVIL PRODUCTS PART No.
Is E									DRAWN	MC	18-10-16	CIVIL PRODUCTS		WIRE ROPE SAFETY BARRIER	
						湿			CHECKED	D.	18-10-16	A valmont COMPANY			
									APPROVED	LG	18-10-16	DRAWING AND CONTENTS ARE COPYRIGHT TO INGAL CIVIL PRODUCTS AND CAN ONLY BE USED	TITLE	TL4 POST ARRANGEMENT	DRAWING No.
~ □		ORIGINAL ISSUE				~			SCALE	N.T.S. @	A3	WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL PRODUCTS	-		WR-STD-060-NZ
REV	V DAT	TE DESCRIPTION	DRAWN	CHECKED	APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	ISSUE FOR	INFORMATI	ON ONLY	57-65 AIRDS ROAD PH. +61 2 9827 3333 MINTO, N.S.W 2566 www.ingalcivil.com.au			Rev: 0

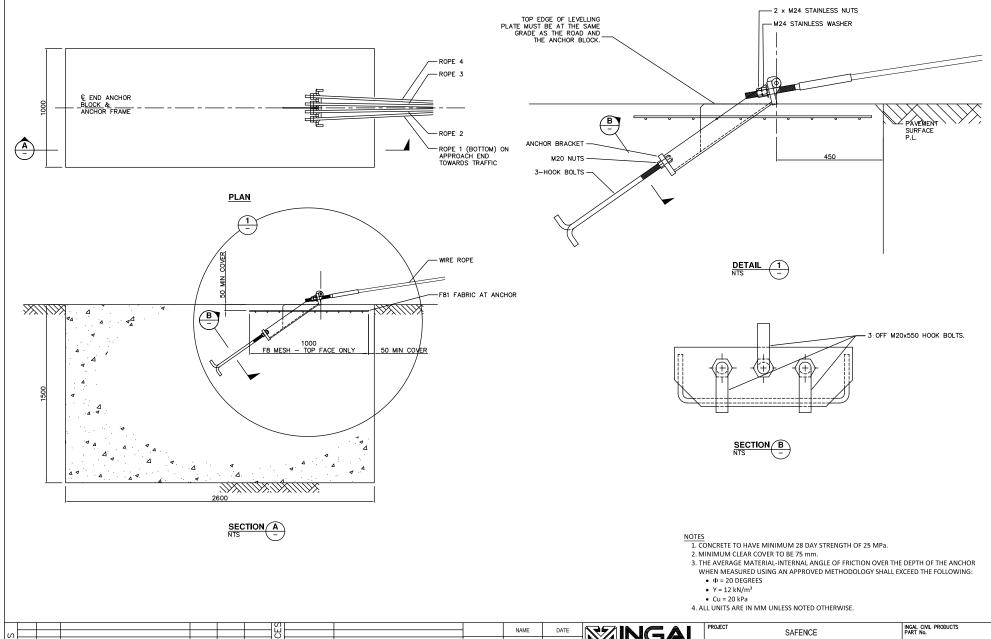

DRAWN MC 18-10-16 LG CHECKED 18-10-16 APPROVED LG 18-10-16 SCALE N.T.S. @ A3 REV DATE DESCRIPTION DRAWN CHECKED APPROVED DRAWING NUMBER REFERENCE DRAWINGS ISSUE FOR INFORMATION ONLY


CIVIL PRODUCTS DRAWING AND CONTENTS ARE COPYRIGHT TO INGAL CIVIL PRODUCTS AND CAN ONLY BE USED WITH PRIOR WRITTEN CONSENT FROM INGAL CIVIL PH. +61 2 9827 3333 www.ingalcivil.com.au

WIRE ROPE SAFETY BARRIER DRAWNG No. RECTANGULAR (TYPE 1) ANCHOR BLOCK WR-STD-062-NZ

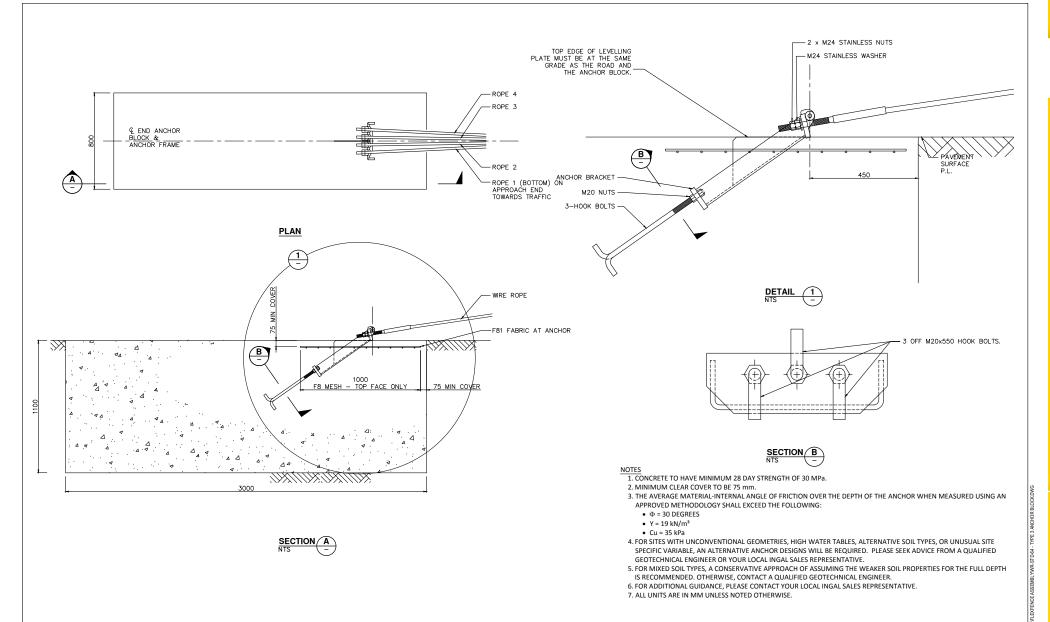

S					SES				NAME	DATE	PROJECT SAFENCE INGAL CIVIL PRODUCTS PART NO.
NS N					Ĭž.			DRAWN	MC	18-10-16	WIRE ROPE SAFETY BARRIER
18					i iii			CHECKED	LG	18-10-16	CIVIL PRODUCTS A valmont COUPANY
					區			APPROVED	LG	18-10-16	DRAWING AND CONTENTS ARE COPYRIGHT TO ITILE RECTANGULAR (TYPE 3) ANCHOR BLOCK DRAWING No.
	0	ORIGINAL ISSUE			2			SCALE	N.T.S. @	A3	WR-STD-064-NZ
	REV	DATE DESCRIPTION	DRAWN	CHECKED APPROVED		DRAWING NUMBER	REFERENCE DRAWINGS	ISSUE FOR	INFORMATION	ON ONLY	57-65 AIRDS ROAD PH. +61 2 9827 3333 MINTO, N.S.W 2566 www.ingalcivil.com.au Rev. 0

REV. 3

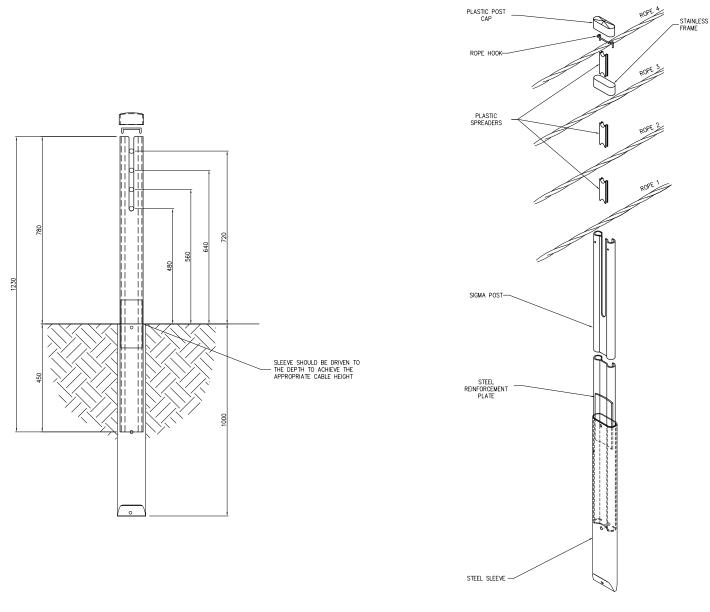


NOTES:

- THE IMPACT CONDITIONS ARE DESCRIBED AS FOLLOWS; a) TL3 REFERS TO NCHRP REPORT 350 TEST LEVEL 3. THIS IS AN IMPACT WITH A 2,000KG PICK-UP TRUCK TRAVELING AT 100KM/H AND 25°. b) TL4 REFERS TO NCHRP REPORT 350 TEST LEVEL 4. THIS IS AN IMPACT WITH AN 8,000KG RIGID TRUCK TRAVELING AT 80KM/H AND 15°. FLEXFENCE TL4 HAS BEEN APPROVED BY THE US FEDERAL HIGHWAY ADMINISTRATION AS A 3 ROPE OR 4 ROPE BARRIER.
- THE DYNAMIC DEFLECTION VALUES SHOULD NOT BE CONSIDERED AN EXACT DISTANCE, BUT RATHER AS A SINGLE POINT WITHIN THE RANGE
- EARCH DISTANCE, BUT KATHER AS A SINGLE POINT WITHIN THE RANGE OF DEFLECTIONS THAT CAN BE EXPECTED.

 STATE ROAD AUTHORITY SPECIFICATIONS SHOULD BE REFERENCED TO OBTAIN APPROVED POST SPACINGS AND RELEVANT MULTIPLYING FACTORS FOR INSTALLATIONS ON CURVES AND/OR VARIATIONS IN BARRIER LENGTHS (IF REQUIRED).
- 4. DIMENSIONS SHOWN ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED
- ICP DISTRIBUTE THIS WRSB SYSTEM UNDER THE PRODUCT NAME SAFENCE IN NEW ZEALAND. REFER NZTA APPROVAL LETTER FOR APPROVED CONFIGURATION.
- CABLE TENSION 25kN @ 20°C AMBIENT AIR TEMP.
- SOIL TO MEET OR EXCEED THE REQUIREMENTS FOR AASHTO STANDARD SOIL OR RMS-R44 VERGE MATERIAL (Min CBR 15%, PLASTICITY INDEX; ≥ 6 AND ≤12.

							(/)				NAME	DATE	movr and	INGAL CIVIL PRODUCTS 57-65 AIRDS ROAD	PROJECT DATE NAME OF THE PROJECT OF	INGAL CIVIL PRODUCTS REFERENCE No.	
0							JŸ.			DRAWN	мс	12-12-2015		MINTO, N.S.W AUSTRALIA 2566	FLEXFENCE WIRE ROPE SAFETY BARRIER	THE ENERGY TO	
ΙŻ	1						Z							PH. +61 2 9827 3333			
1];;			CHECKED	LG	12-12-2015	mont awar	FAX +61 2 9827 3300 www.ingalcivil.com.au			
18	3	15-05-2017	NOTE ADDITIONS	MC	LG	LG] 🗔						+	ONTENTS ARE COPYRIGHT TO	TITLE	DRAWING No.	_
16	2	14-03-2017	NOTE ADDITIONS	LG			115			APPROVED			INCAL CIVIL DDO	DUCTO AND CAN ONLY DE LICED	TI 4 DOCT	DIAMINO NO.	
ă	1	22-06-2016	SLEEVE EXTENDED TO 1000mm	LG			2			SCALE	NTS		WITH DRICE WRIT	DUCTS AND CAN ONLY BE USED	DRIVEN SLEEVE ARRANGEMENT	WR-STD-86	
							1			SCALE	NIS		PRODUCTS	TEN CONSENT THOM MORE ONE	IDRIVEN SLEEVE ARRANGEMENT	1111 315 00	
	REV	DATE	DESCRIPTION	DRAWN	CHECKED	APPROVED	1	DRAWING NUMBER	REFERENCE DRAWINGS	SIZE	A1						Rſ

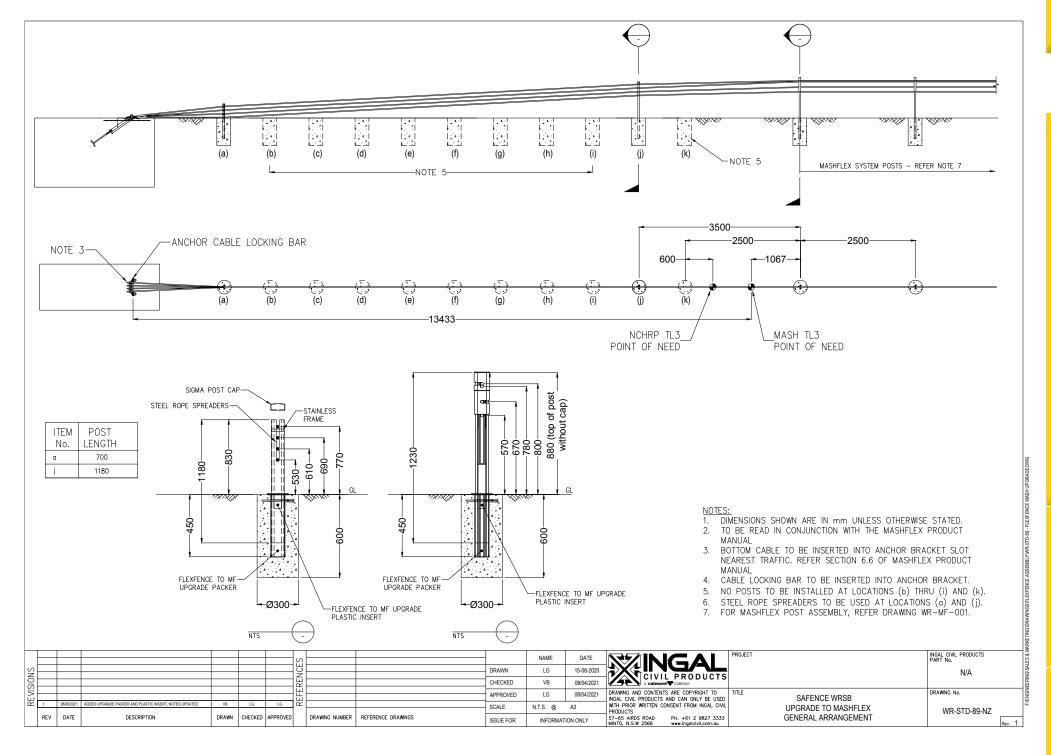





For more information

contact us on the web

ww.ingalcivil.co.nz

Auckland

12 Offenhauser Drive, East Tamaki, Auckland 2013, New Zealand Ph: 09 920 838

Email: sales@ingalcivil.co.nz **Christchurch** Ph: 0211 983 311

Ph: 021 504 870 Wellington

Head Office: Sydney 57-65 Airds Road, Minto, NSW 2566 Ph: +61 2 9827 3333 Fax: +61 2 9827 3300 Free call (within Australia): 1800 803 795 Email: sales@ingalcivil.com.au